
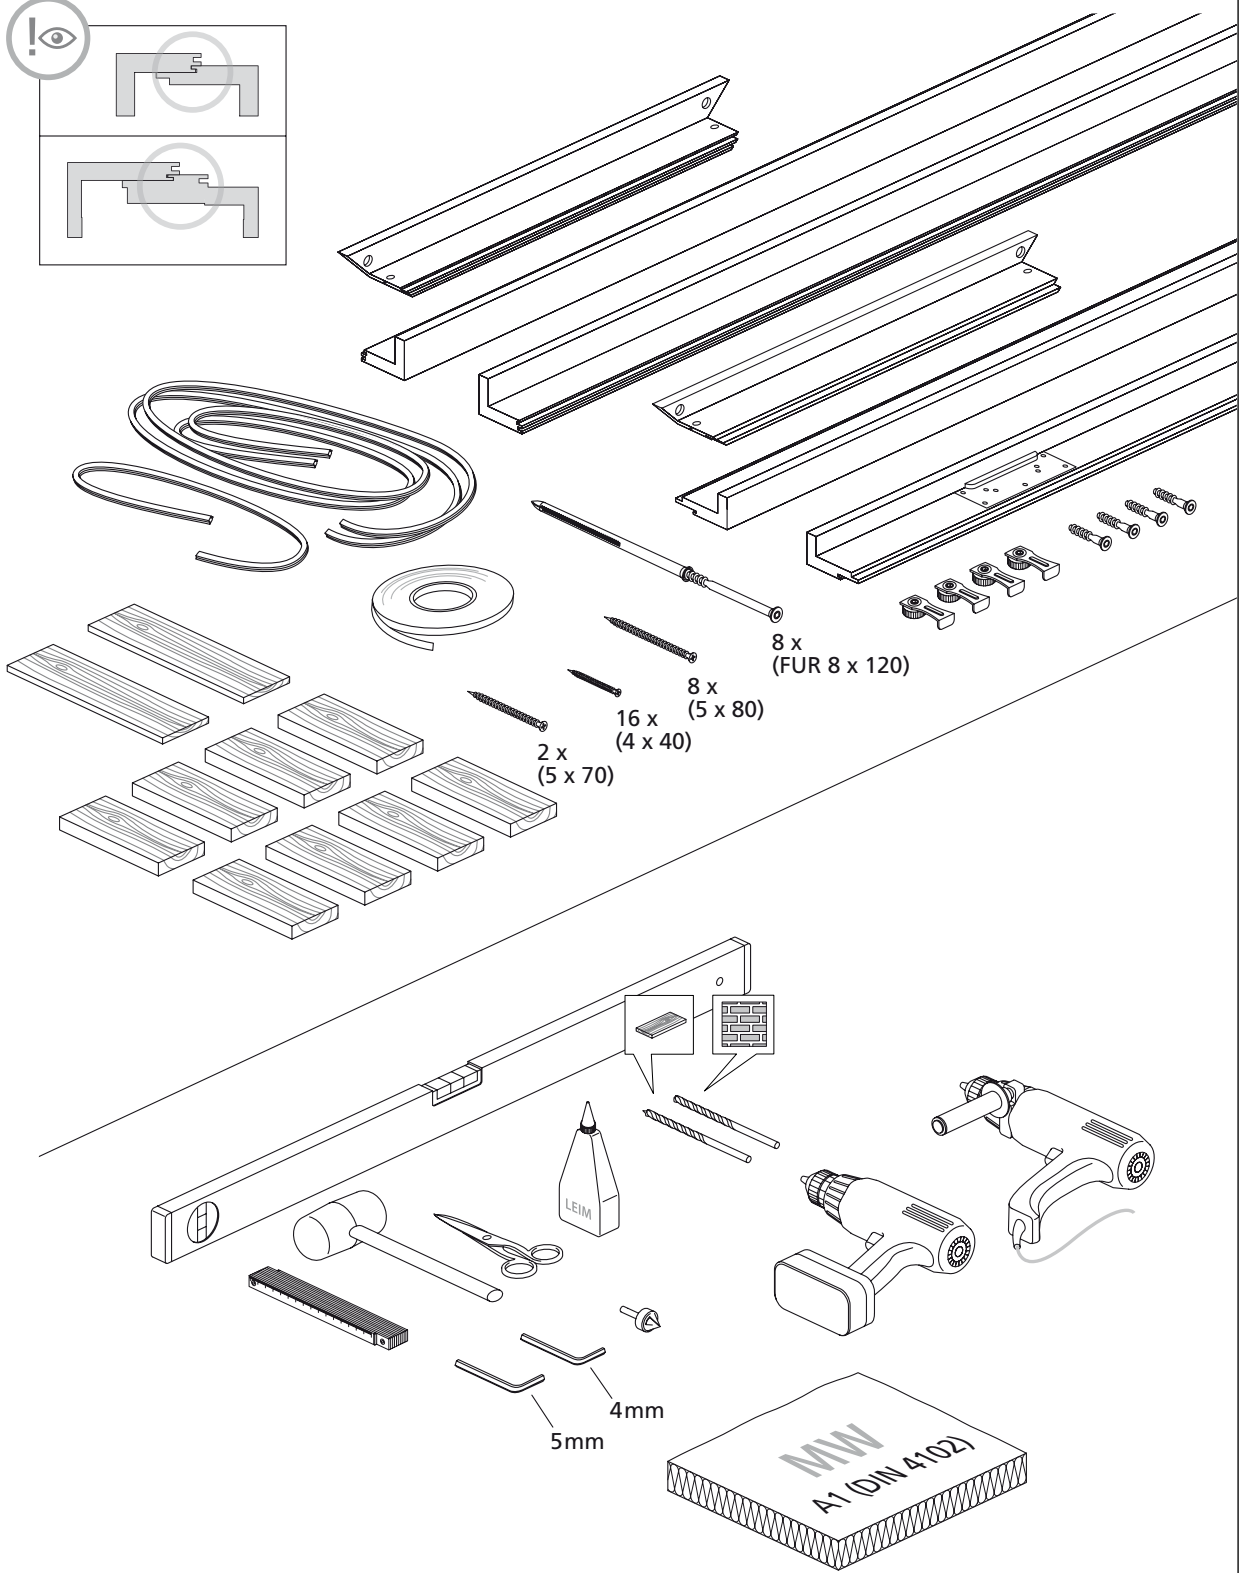


# Montageanleitung Holzsteckzarge

Assembly instructions – Plug-in frame

Notice de montage – Huisserie en bois spécial

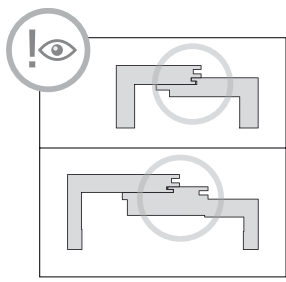

8 x  
(FUR 8 x 120)


8 x  
(5 x 80)

16 x  
(4 x 40)


2 x  
(5 x 70)




4mm  
5mm

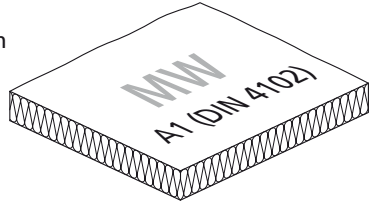


1

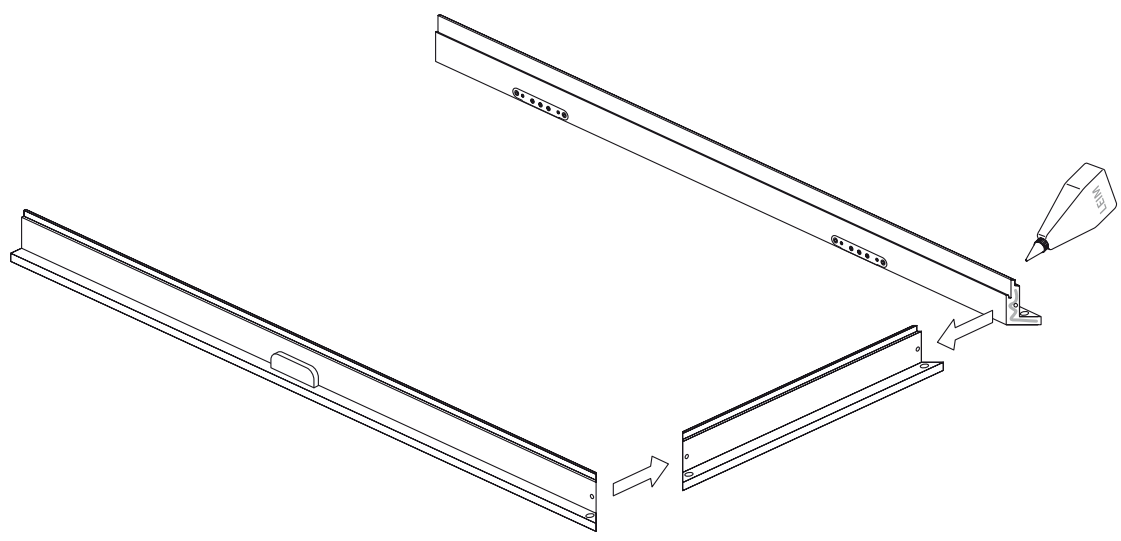


2

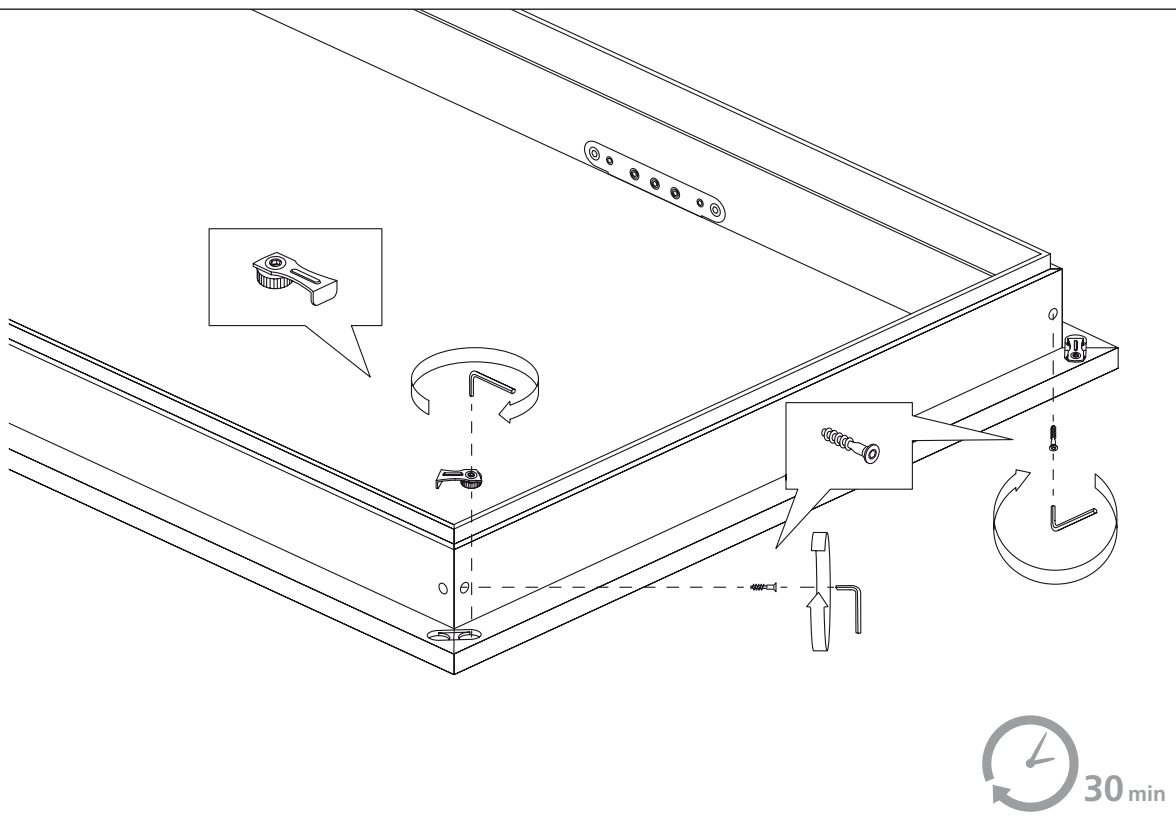


3




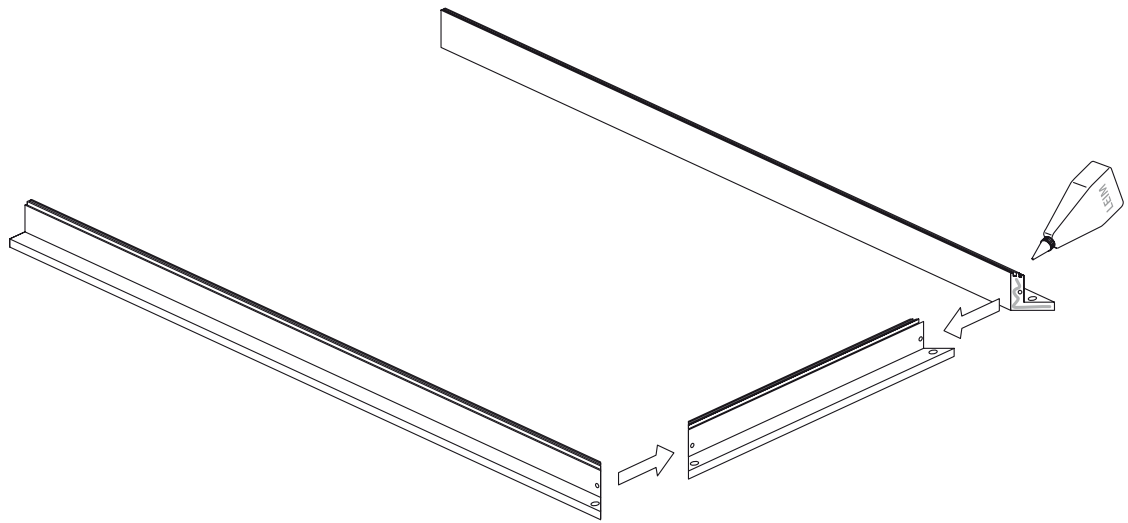


4

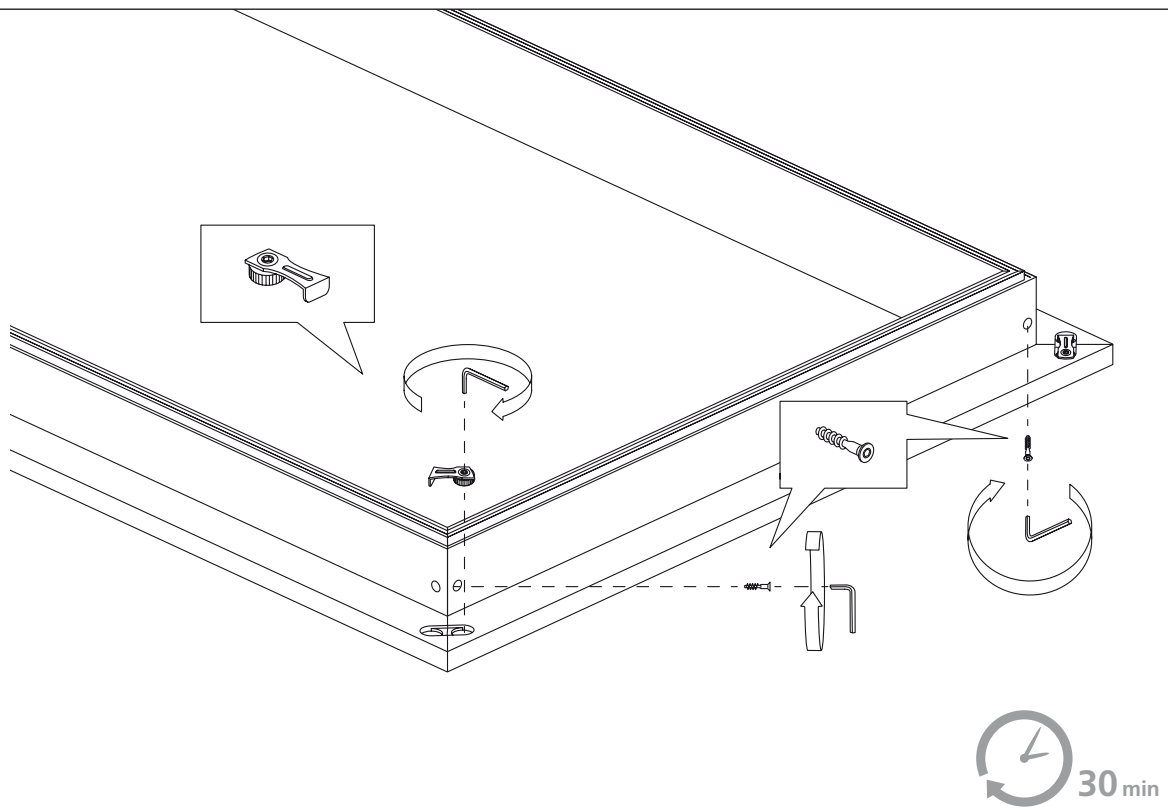


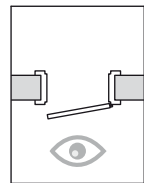
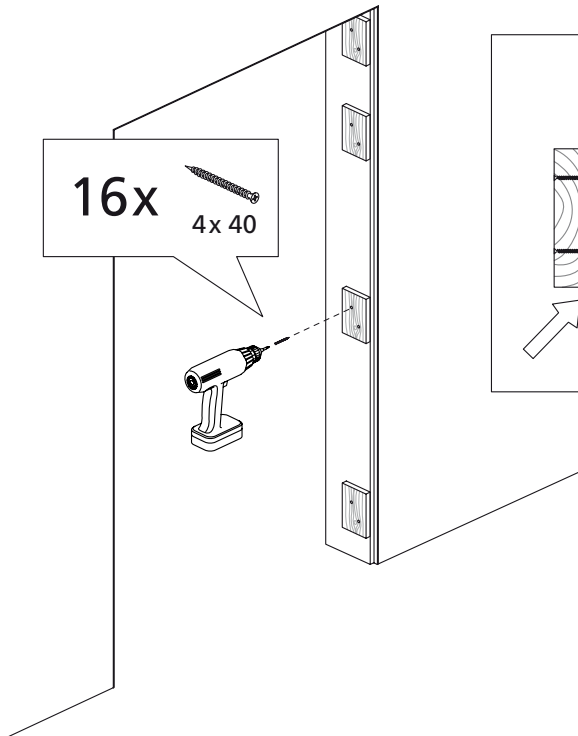
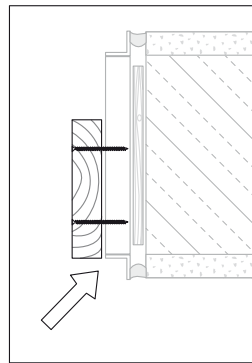
5

8x 

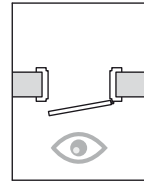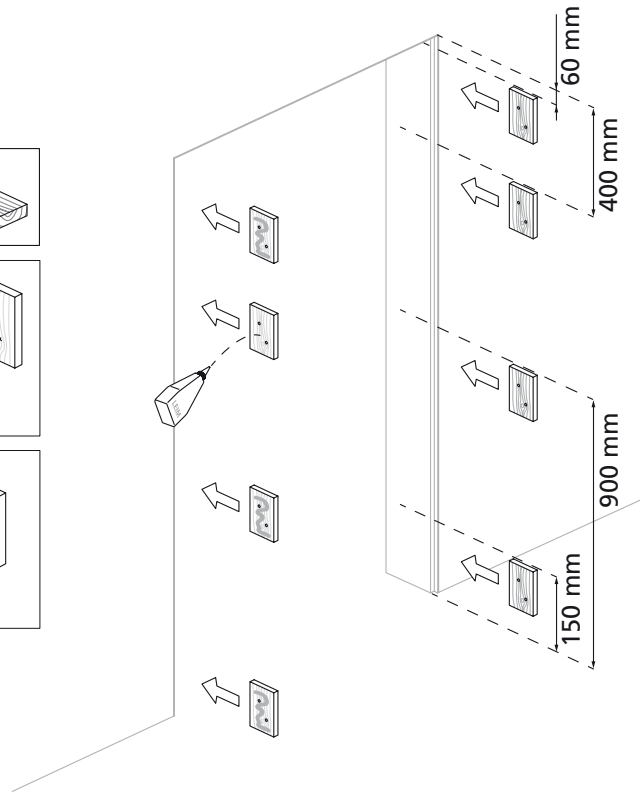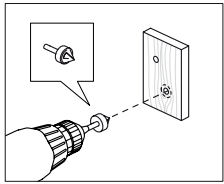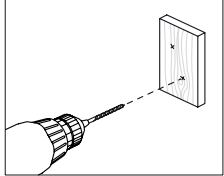


6


16x   
4x 40




7

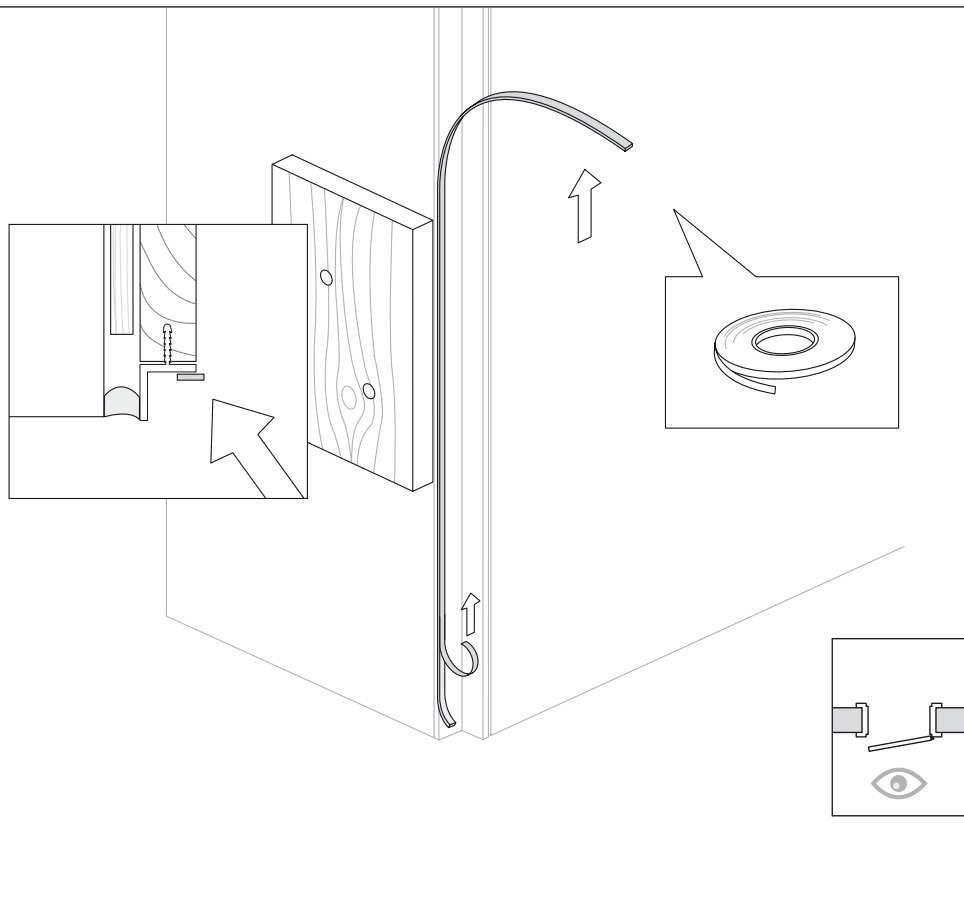


8

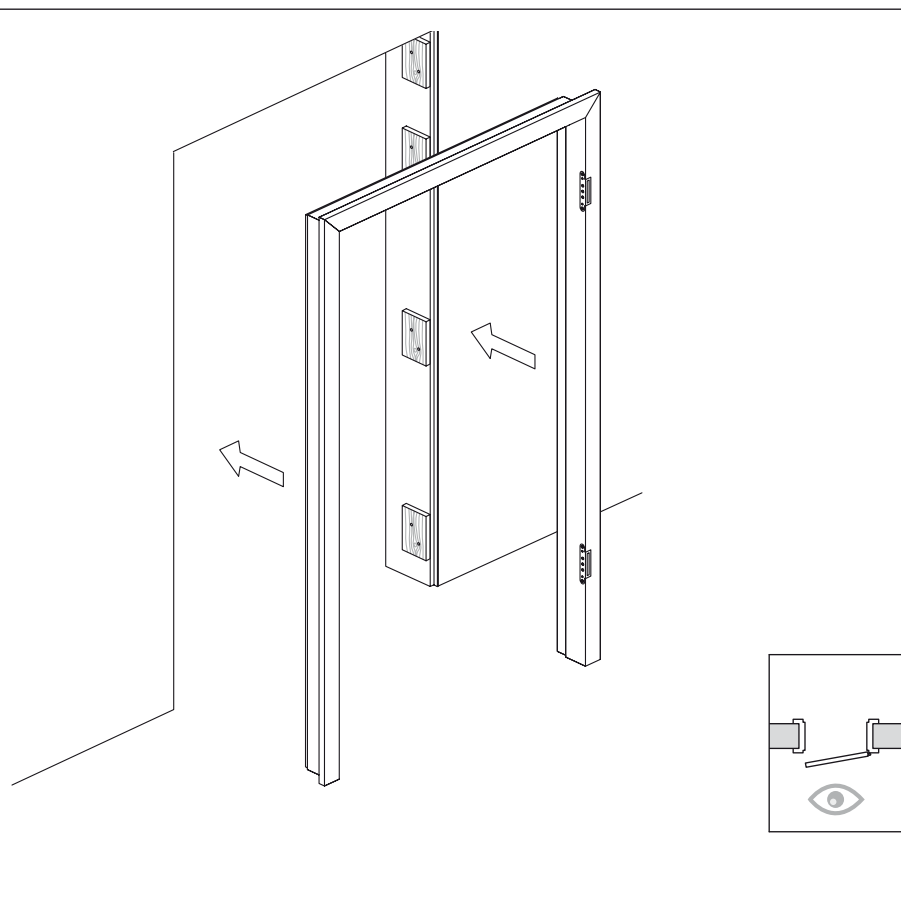


9

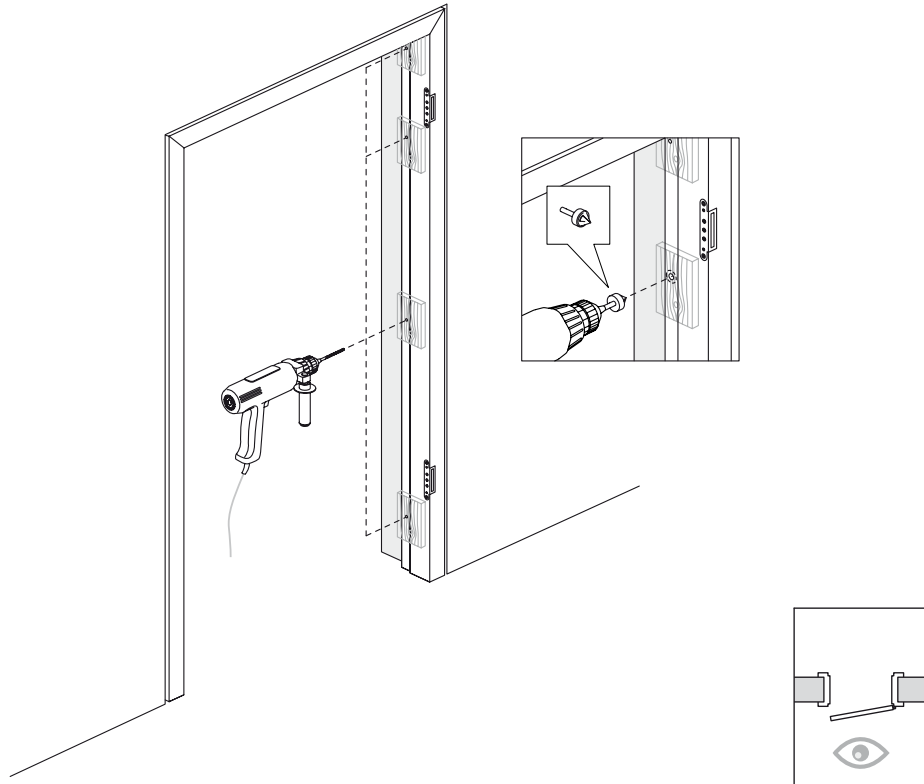


10

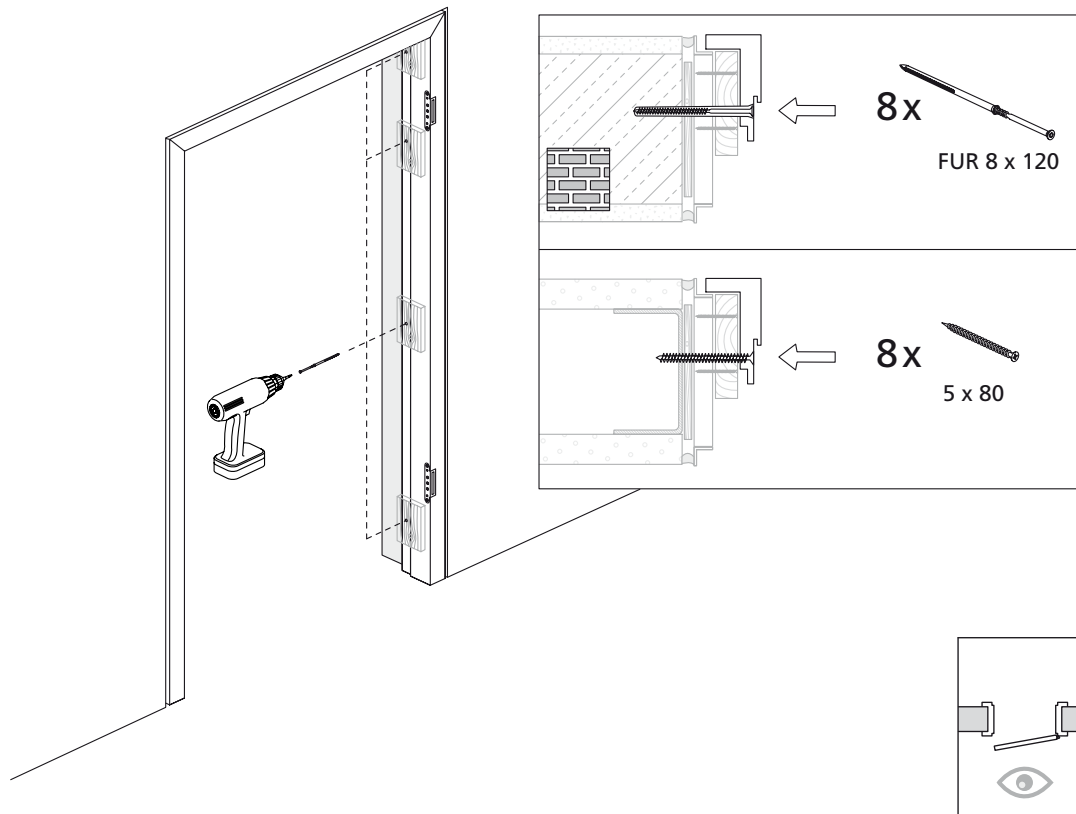


11

2x 





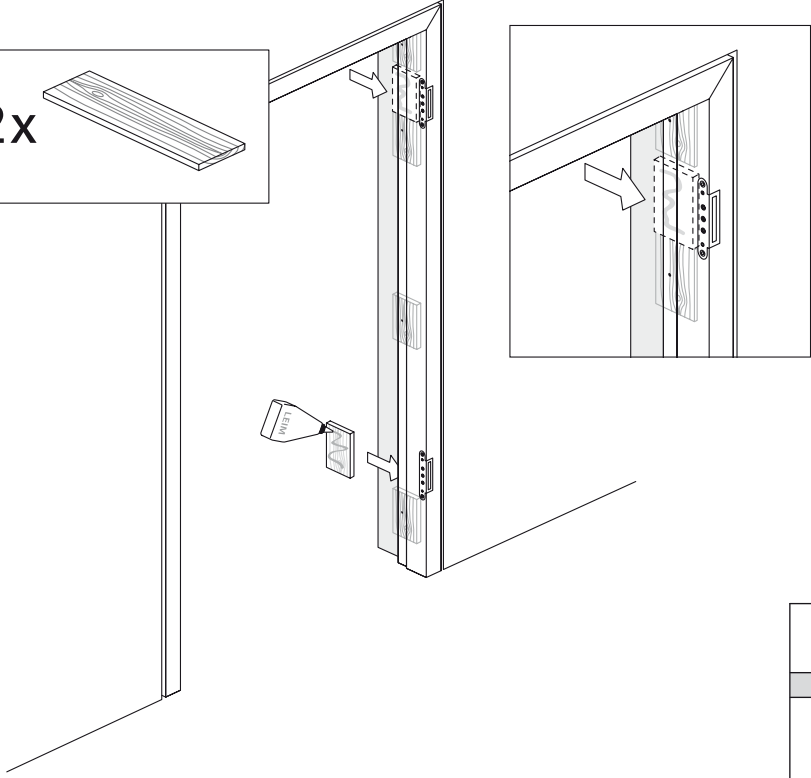


12

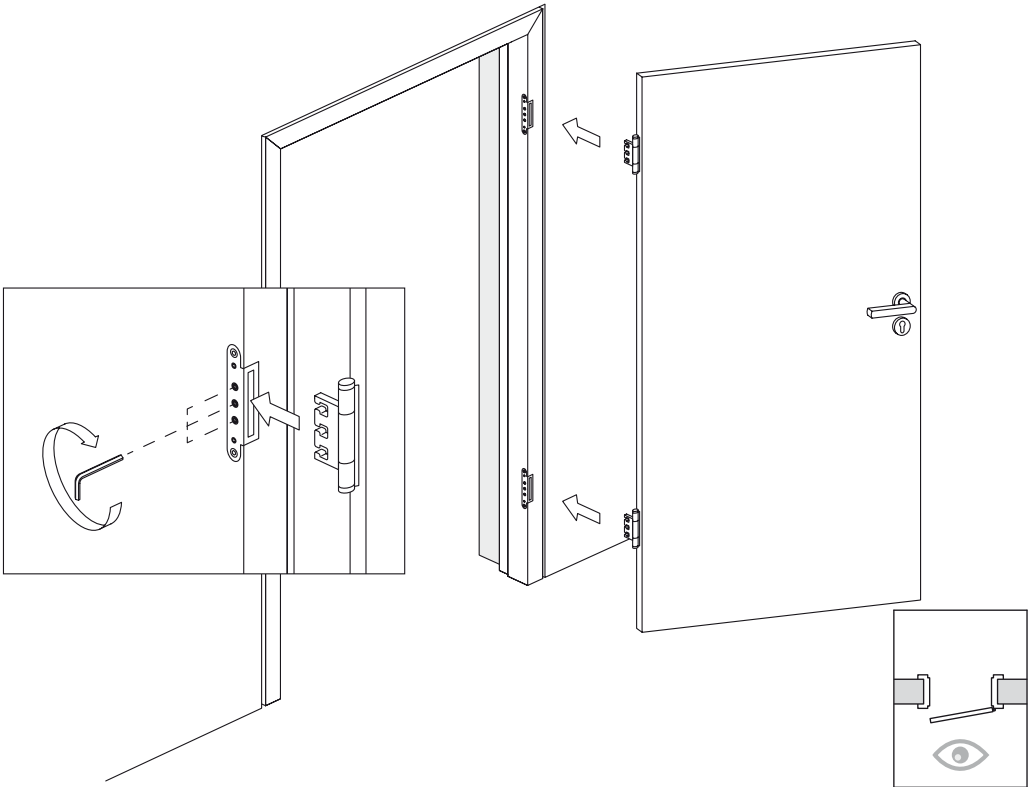













**i**

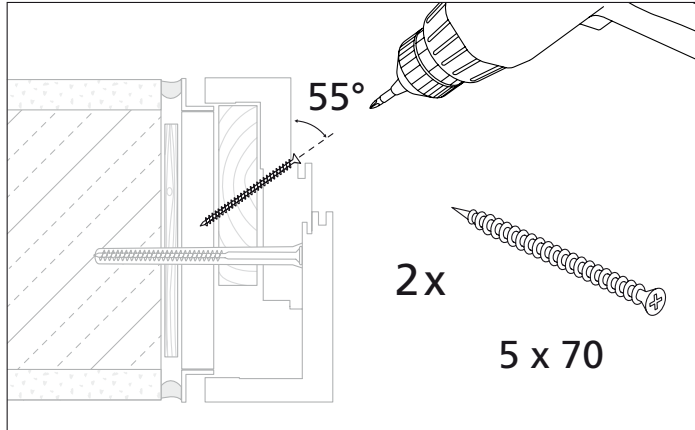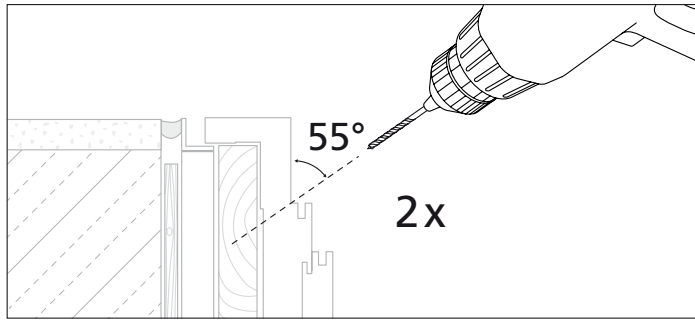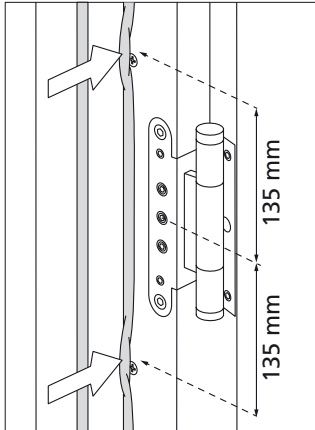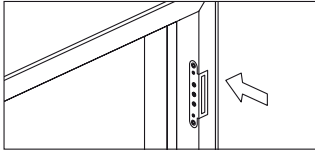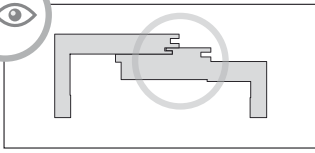


**13**

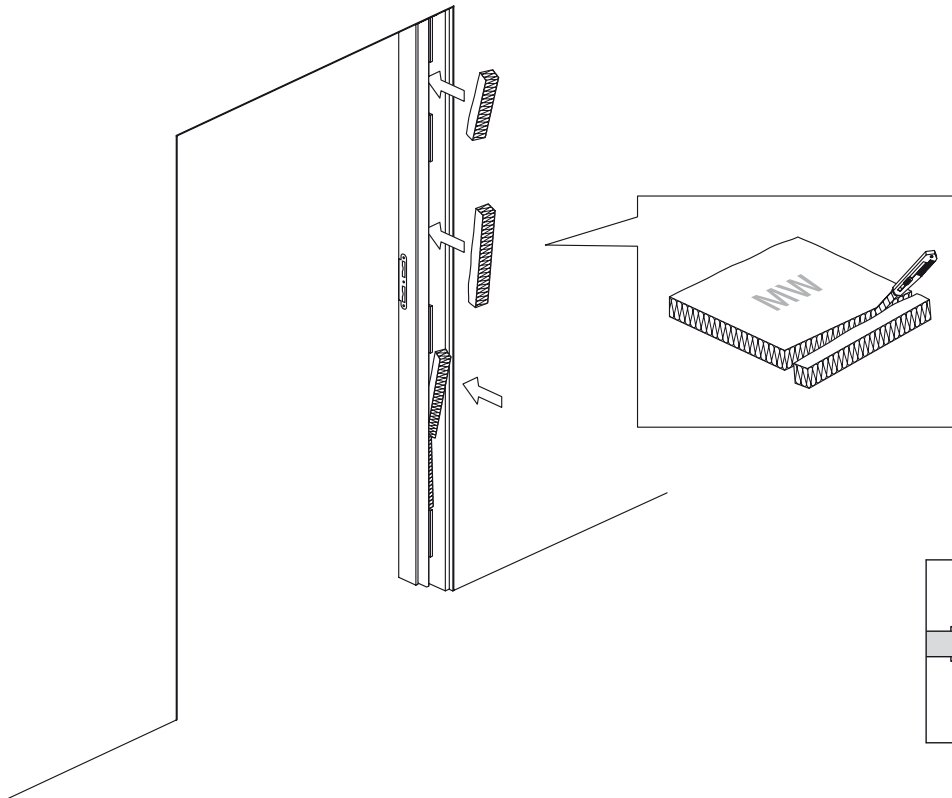


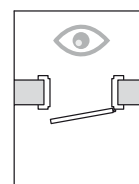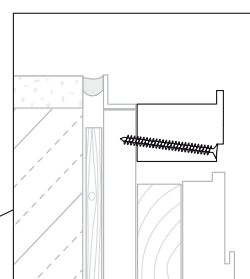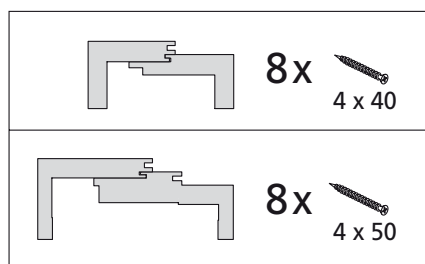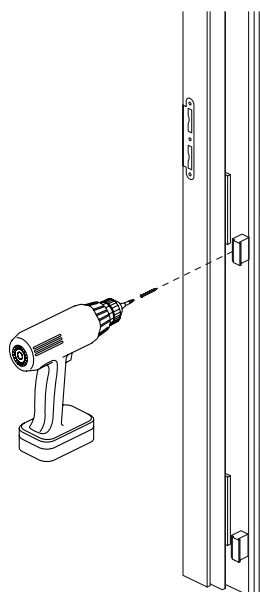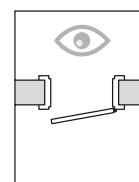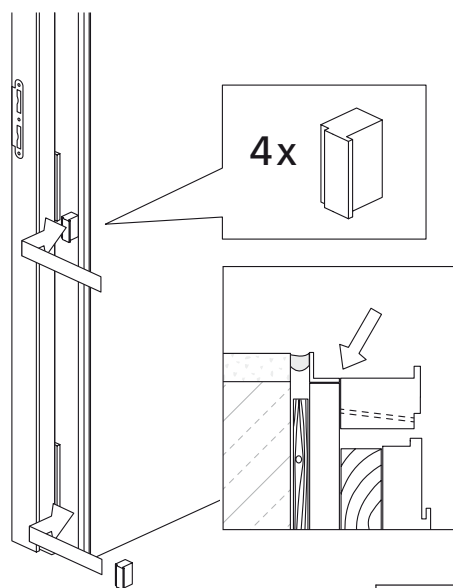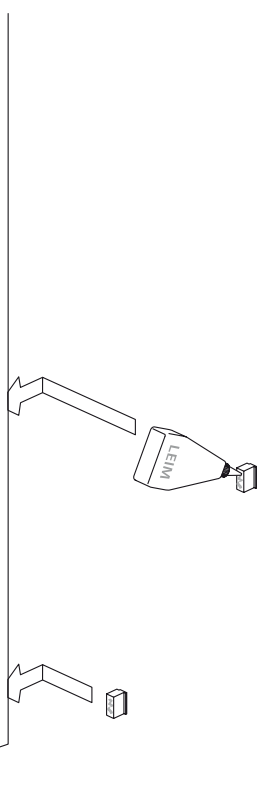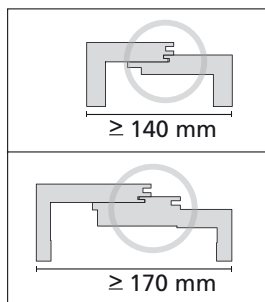


14

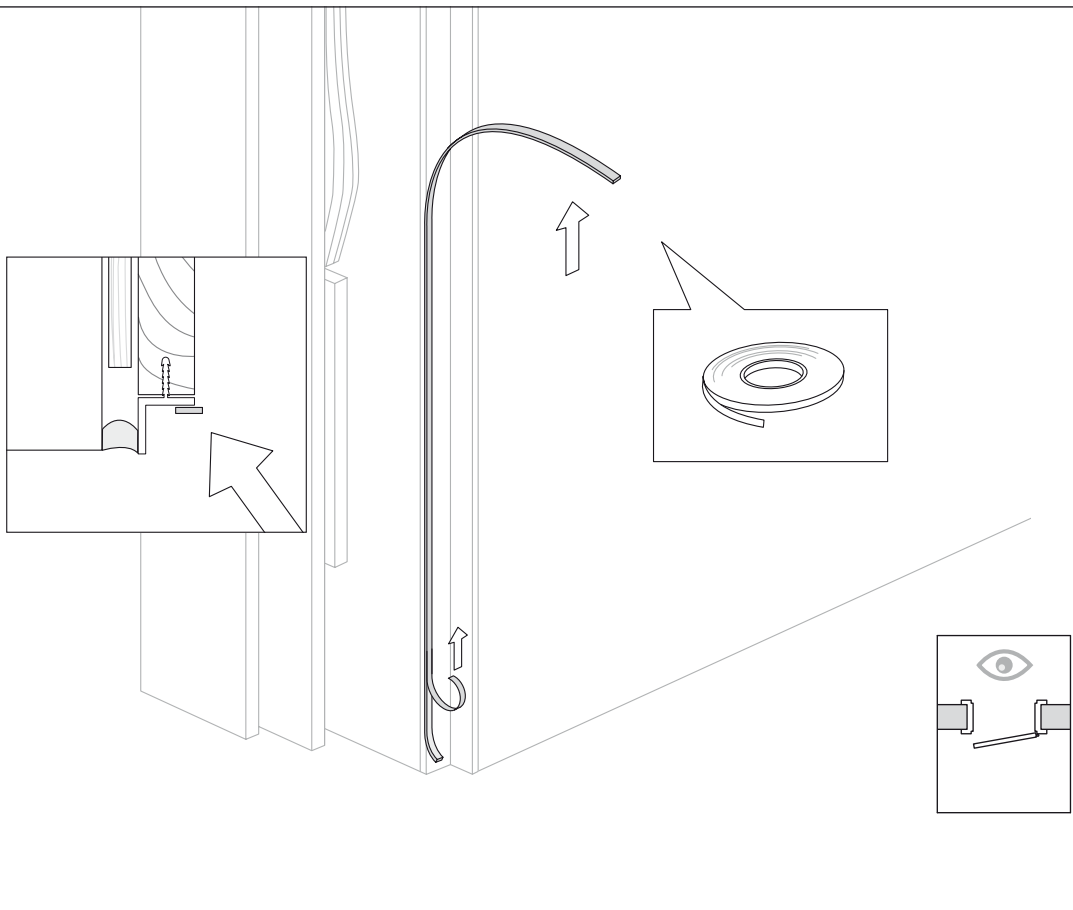


15

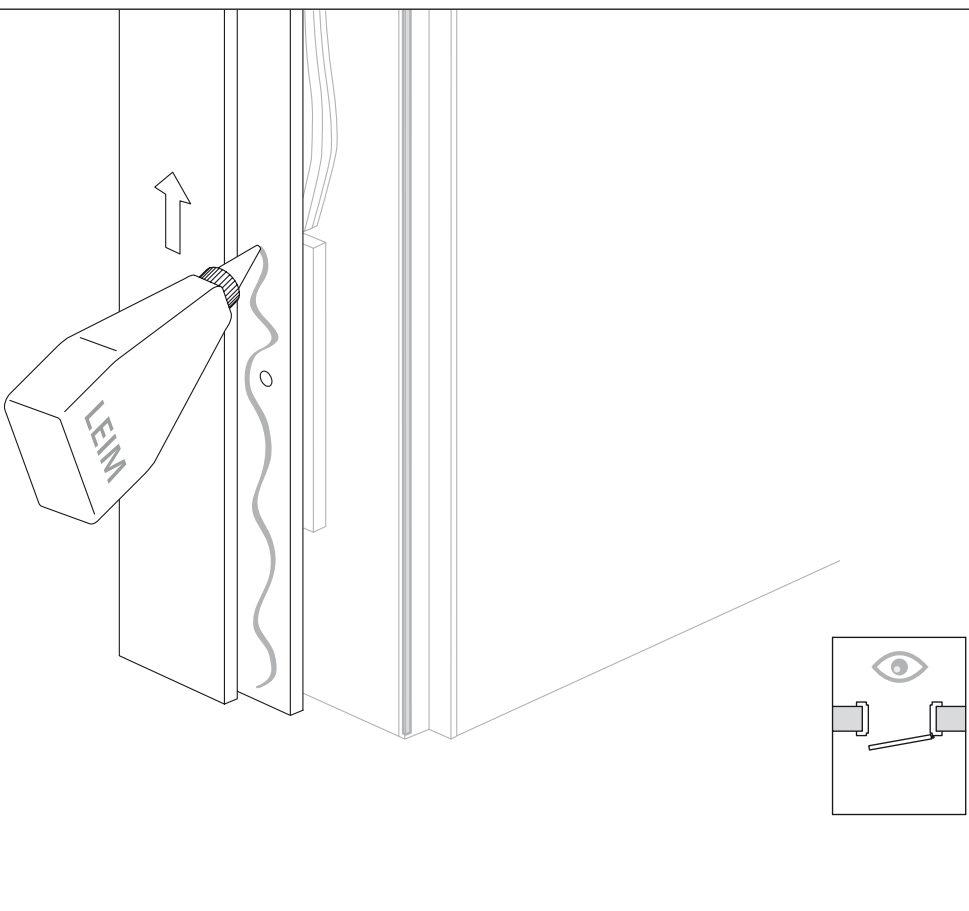


16

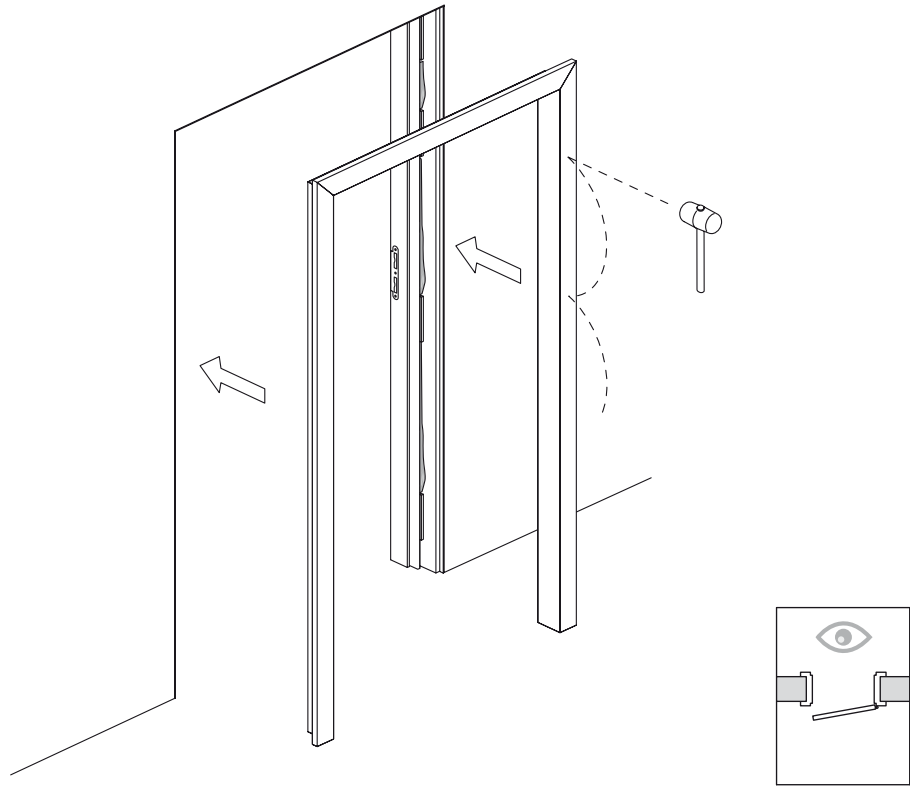


17

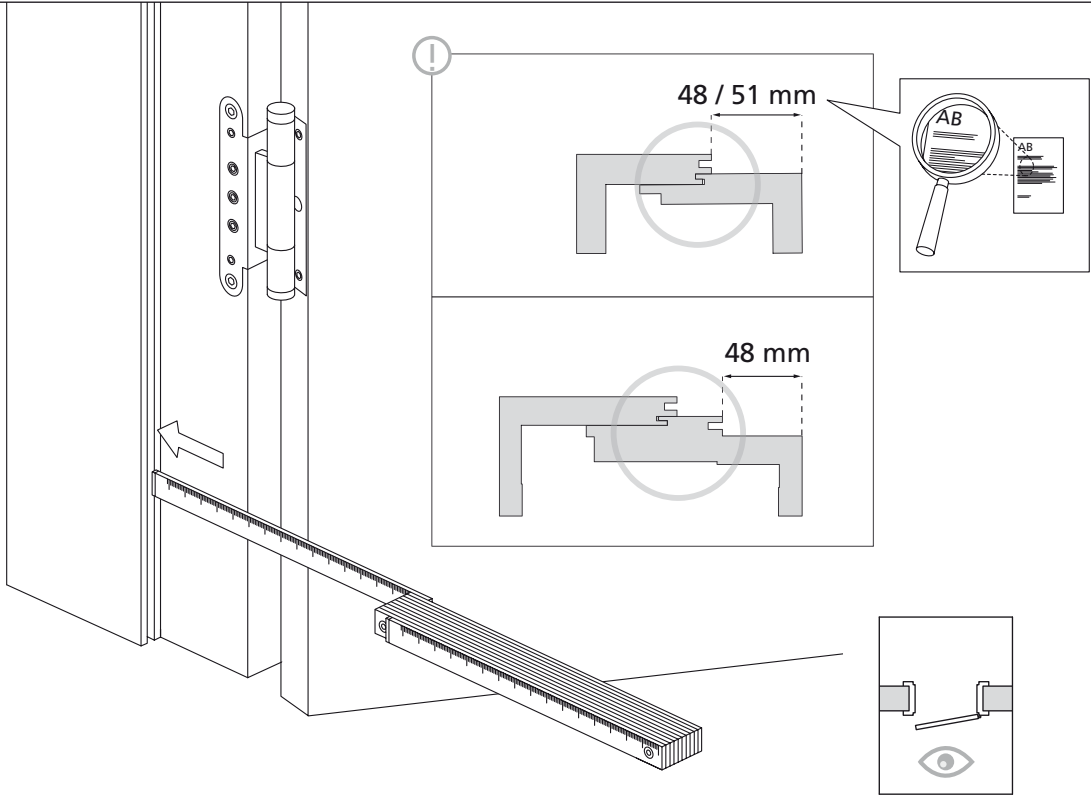







18

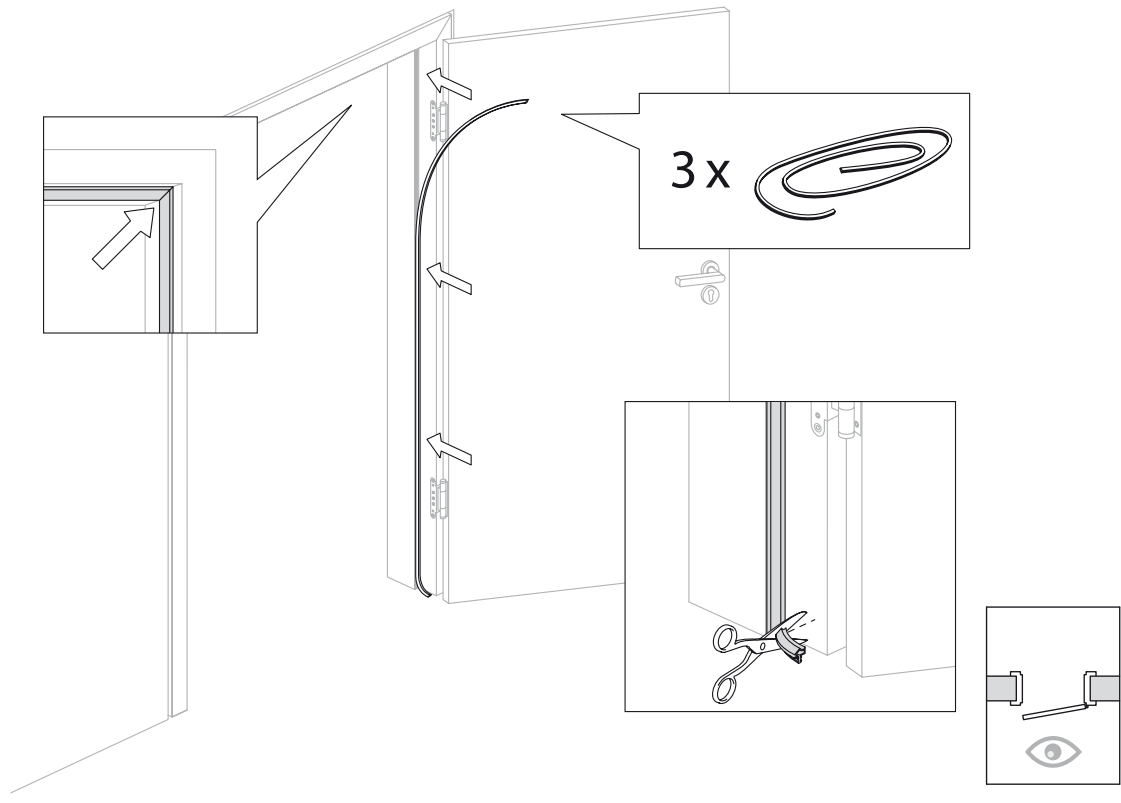

19

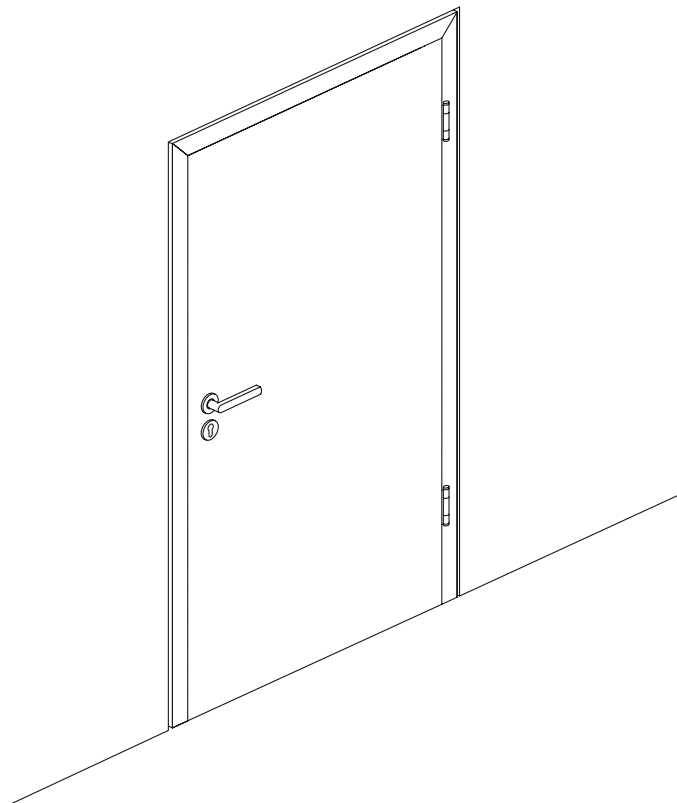

i

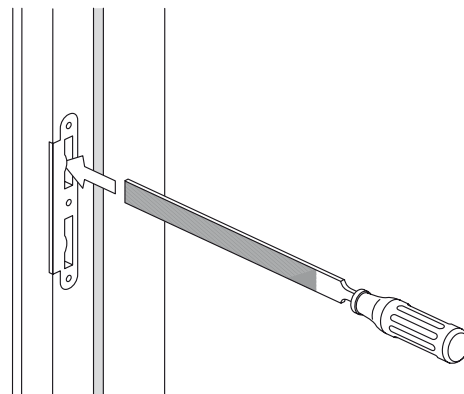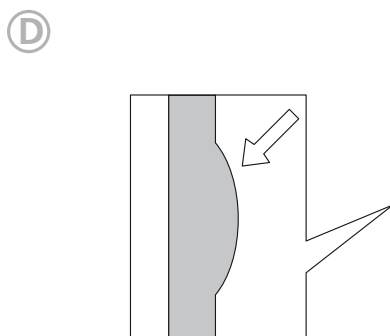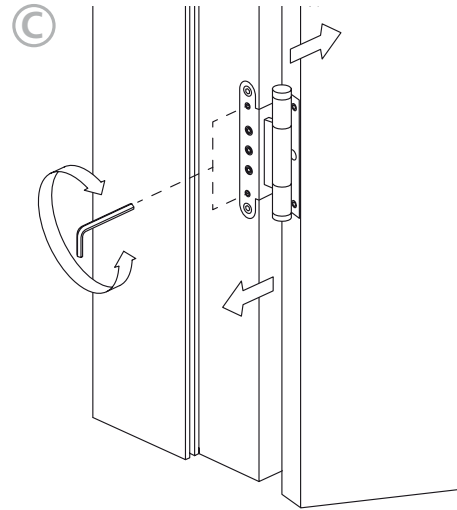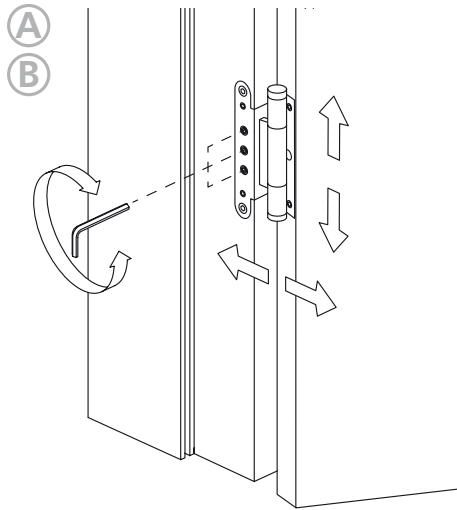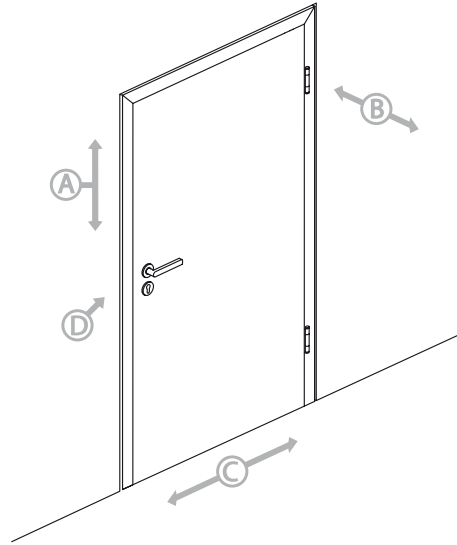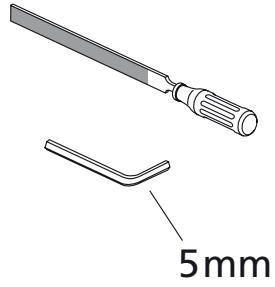



**WESTAG** 

**Westag AG**

Hellweg 15 | 33378 Rheda-Wiedenbrück | Germany

Tel. +49 5242 17-2000 | Fax +49 5242 17-72000

tz.vertrieb@westag.de | [www.westag.de](http://www.westag.de)